

Saramonic

Ultracompact 2.4GHz Dual-Channel Wireless Microphone System

2.4GHz迷你双通道无线麦克风系统

Blink900 B2R

User Manual
用户手册



Statement

Please read this manual carefully before using and strictly operate and store it in accordance with the instructions. Please save the manual for your future reference.

If you need further assistance than the user manual, please consult your retailer for help or email us: info@saramonic.com

General Introduction

Adopt 2.4GHz wireless transmission technology, the Saramonic Blink900 B2R is an incredibly lightweight and easy-to-use wireless microphone that delivers high-resolution sound quality. It is ideal for live streaming, vlogging, mobile journalism and more.

Built-in 16GB memory, the transmitter features on-board recording which can be used as a recorder for audio backup. It solves audio problems such as drop frames or dropouts attributed to some reasons when using the microphone wirelessly.


Use the Blink900 B2R in many ways. The transmitter can also be used with a 3.5mm lavalier microphone or line input device in addition to the built-in microphone as your needs. Connect one of the included audio cables to the receiver's 3.5mm TRS analog output for use with cameras, recorders, mixers, smartphones, tablets, laptops and more.

Features

- Up to 200 meters of wireless transmission
- Receiver's 3.5mm headphone output - monitor your audio in real-time
- Selectable Mono/ Stereo output setting
- High-resolution LCD display - see vital information at a glance
- Blink900 B2BOX charging case included - make the kit easy to carry on
- The belt clip can be used with a lanyard (sold separately) for hanging on the neck
- The memory can store up to 28.5 hours of recording at the 48kHz/24bit sampling rate.
- The file will be automatically split after 30 minutes of recording, making it easy to quickly find your desired recording segment.
- If the memory is full of 16GB, the original file will be automatically overwritten with the latest file from the beginning.
- Transmitter's USB-C port - connect to a laptop or smartphone to read recording files

Product Structure

Blink900 TXR Transmitter

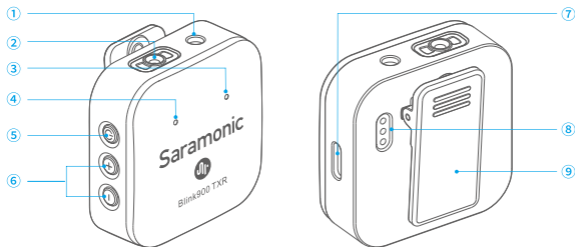

① 3.5mm TRS Input

It can be connected to the included 3.5mm lavalier microphones, and other 3.5mm microphones or line-in devices.

② Built-in microphone

③ Recording indicator

Status	Indicator
Microphone muted	Blinking red
On-board recording enabled	Static red
On-board recording disabled	Light off

④ Status indicator

Status	Indicator
Unpaired	Blinking blue slowly
Pairing	Blinking blue quickly
Paired successfully	Static blue
Maximum/ Minimum gain	Blinking blue 3 times quickly
Line-in mode	Static yellow
Low battery	Blinking red
Charging	Static red
Fully charged	Static blue

⑤ Power button

- Press and hold for 2 seconds to power on or off.
- Press to mute or unmute the microphone.
- Press and hold for 5 seconds to enter the pairing state in shutdown mode.

⑥ +/- button

- Press the "+" or "-" button to adjust mic gain from 0 to 6 level. (The setting is retained even after the power is turned off.)
- Press both the "+" and "-" buttons at the same time for 2 seconds to switch between Mic-in or Line-in mode. (The setting will return to the Mic-in mode after the power is turned off.)
- Press and hold the "-" button for 3 seconds to enable or disable the on-board recording.


⑦ USB-C data port

Used for charging. After connecting a laptop or smartphone, can also be used to read the recording files.

⑧ Charging contacts

⑨ Belt clip

Blink900 RX Receiver

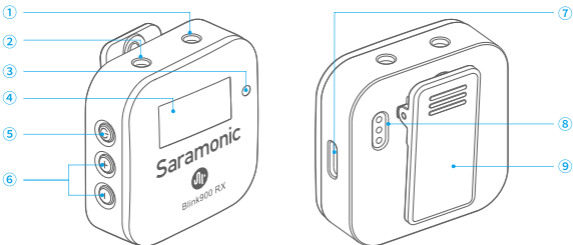

① 3.5mm TRS output

For analog audio output to a camera, recorder, or mixer, etc.

② 3.5mm TRS headphone port

Connect your headphone to monitor the audio output in real-time.

③ Ambient light sensor

④ LCD display

⑤ Power button

Press and hold for 2 seconds to power on or off.

⑥ +/- button


On the home screen, press the "+" or "-" button to adjust output volume. Also can be used for setting values or functions. (For more details, please refer to "Receiver's Display Operation".)

⑦ USB-C charging port (DC 5V)

⑧ Charging contacts

⑨ Belt clip

Blink900 B2BOX Charging case

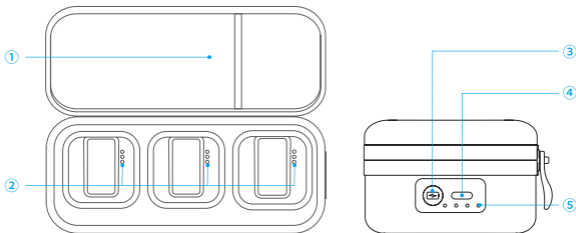

① Accessory storage pocket

② Charging contacts

③ Indicator button


Press to light up the indicator and display the current battery level of the charging case.

④ USB-C charging port (DC 5V)

⑤ Battery level indicator

Status	Indicator
Low battery	● ○ ○ ○
Charging	● ● ● ●
Fully charged	● ● ● ●
Current battery level (75%)	● ● ● ○

Receiver's Display Operation

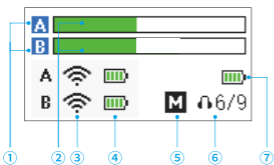

Home screen

① Channel icon

A/B Indicates channel A/B is successfully paired.

A/B Indicates channel A/B is unpaired.

A off / **B** off Indicates channel A/B is turned off.

② Audio input level meter

Displays the audio input level.

③ RF level indicator

Indicates the current signal level.

Signal is strong (Successfully paired)

Signal is weak (Successfully paired)

Unpaired

④ TXS's battery level indicator

Displays the battery level. Please recharge the transmitter immediately as soon as the indicator starts flashing.

⑤ RX's output mode

M: Mono **S**: Stereo



⑥ Output volume

⑦ RX's battery level indicator

Displays the battery level. Please recharge the receiver immediately as soon as the indicator starts flashing.

Menu screen

- From the Home screen, press and hold the "+" button to access the menu page.
- From the menu page, press and hold the "+" button to access options. → Press the "+" / "-" button to setting values or functions. → Press and hold the "+" button again to save the settings. → Press and hold the "-" button to return to the Home screen.
- If no operation is performed within 20 seconds on the menu page, the display will automatically return to the Home screen.




Channel Setting

Turn on/off the channel A/B.


Default setting:

Channel A : On Channel B : Off



Output Volume Setting

Output volume can be set from 0 to 9. Default is "6". (The setting is retained even after the unit is turned off.)




Output Mode Setting

The output mode can be set to either mono or stereo. When in mono mode, the audio from the transmitter, or transmitters will be mixed to both the left and right sides. When in stereo mode, the two transmitters' audio output will be separated to the left and right sides. Default is mono.




Backlight Setting

Set backlight to always on or on for 10/30/60 seconds. Default is "On".




Brightness Setting

You can set the brightness to "Auto" or manually select a value within the range of 1-10. Default is "7"




Language Setting

English and Chinese are available. Default is English.

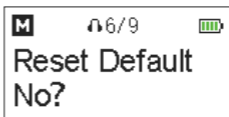

Restore Default Setting




Pairing


Select "Yes?" to pair the receiver with the transmitter.

How to Use

1. Press and hold the power buttons for 2 seconds to turn on the transmitter(s) and receiver.
2. The transmitter(s) and receiver are paired by default. If they are disconnected, please follow the below steps:
 - ① Press and hold the receiver's "+" button to access the menu page.→Press the "+" or "-" button to find the Pair page.

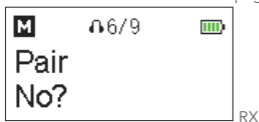

- ② Press and hold the "+" button to access options.→Press the "+" or "-" button to select "Yes?".

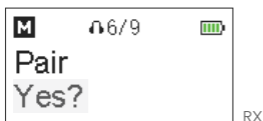

- ③ Press and hold the "+" button to confirm the option. The receiver enters pairing state.
 - ④ Press and hold the transmitter's power button for 5 seconds in shutdown mode to make it enter the pairing state. Its status indicator blinks blue rapidly.
 - ⑤ Transmitter(s) and receiver will be successfully paired within 10s. The transmitter's status indicator will turn static blue.
3. Connect a camera, a smartphone or a laptop to the 3.5mm TRS audio output of the receiver with an adapter cable.
4. Plug your headphones into the receiver's 3.5mm headphone port for audio monitoring as your need.
5. Press and hold the transmitter's "-" button for 3 seconds to enable on-board recording as your need.
6. After recording, put the transmitter(s) and receiver back into the case for charging.

Troubleshooting

If you encounter problems when using the unit, please refer to the following checklist before contacting technical support. If the problem cannot be solved, please contact the dealer's after-sales service department.

- **The units failed to enter the pairing state**

Make sure the transmitter is turned off, and then press and hold its power button until its status indicator blinks blue quickly.

- **Failed to pair two transmitters with one receiver**

- ① Pair the receiver with the two transmitters one by one. There is currently no way to pair the two transmitters with the receiver at the same time.
- ② When pairing two transmitters to one receiver, if one of the transmitters fails to be paired, please turn off the transmitter that has been successfully paired, and then repeat the pairing operation to pair the transmitter with the receiver.

- **The on-board recording cannot be enabled**

- ① The on-board recording can only be enabled after the transmitter has been paired with the receiver.
- ② The transmitter will enter USB Mode when connected to a computer or other mobile devices to read the recording files so that the on-board recording cannot be enabled at this time.
- ③ After the transmitter is turned on and paired with the receiver, the onboard recording can be enabled normally regardless of whether the receiver is turned off, disconnected due to being out of range, or in a low battery state.

- **No sound from the microphone**

- ① When paired, check if the transmitter is currently in Line-in mode (if the transmitter's status indicator is static yellow). If yes, press and hold the "+" and "-" buttons at the same time for 2 seconds to switch to Mic-in mode (the transmitter's status indicator is blue).
- ② Check if the microphone is muted. Short press the transmitter's power button to unmute it.
- ③ Check if the gain and volume are turned to a minimum. Adjust them to a suitable level.

- **The recording files failed to be read when the transmitter is connected to a laptop**

Make sure the on-board recording is disabled so that the recording files can be read.

- **Failed to turn on the units**

Confirm whether the battery is dead due to not being used for a long time. Connect to the charging cable to activate the circuit.

- **The operating range of the units is limited and the distorted noise appears**

- ① It is generally caused by interference in your environment. If there is a working high-power wireless router or wireless device in your environment, it is recommended to change the place or find a suitable distance or angle.

- ② Due to the 2.4GHz wireless frequency being widely used, the signal may be easily attenuated or interfered with. Please try to avoid obstacles while using, such as walls and buildings. And keep away from devices with 2.4GHz frequency, such as high-power Wi-Fi antennas, radios, etc.
- ③ Make sure the connecting cable between the product and the device is not loose.

- **The charging case failed to charge the units**

- ① Firstly, it is recommended to charge the charging case to rule out the low battery.
- ② Wipe all the charging contacts of the product with a clean cloth to avoid a loose connection caused by dust.
- ③ If the magnetic force of the charging case is aging and the products failed to be attracted, please contact our after-sales service for help.

- **Could not find the recording file just recorded**

- ① The recording files are named with consecutive numbers (REC001~REC999). The latest recorded file name is generally the highest number.
- ② A new file will be automatically generated and saved every 30 minutes during recording. The previous recording files can be played back after 30 minutes of recording.
- ③ Make sure that the modified file name is not the same as the existing default file name.

Specifications

Blink900 TXR

Mic Capsule	4mm built-in capsule
Polar Pattern	Omnidirectional
Transmission Type	2.4GHz digital frequency
Operating Range	Up to 200 m (without obstacle)
Frequency Response	20Hz-20kHz
Maximum SPL	100dB SPL (1kHz @ 1m) dBu
Signal to Noise Ratio	> 75dB
Sampling Rate	48kHz
Bit Rate	24bit
Distortion	≤0.1%
Antenna	Built-in FPC antenna
Audio Input	Built-in microphone capsule/ 3.5mm TRS input
Power Requirements	Built-in lithium-ion battery (400mAh)
Built-in Battery Life	Approx. 5.5 hours (Approx. 4.5 hours when the on-board recording is enabled)
Charging Time	Approx. 2 hours
Memory	16GB
Maximum Recording Time Stored	Approx. 28.5 hours
Recording Format	WAV
Weight	Approx. 19.5 g (0.69 oz)
Dimensions	36×36×12.5 mm

Blink900 RX

Transmission Type	2.4GHz digital frequency
Operating Range	Up to 200m (without obstacle)
Frequency Response	20Hz-20kHz
Maximum SPL	100dB SPL (1kHz @ 1m) dBu
Signal to Noise Ratio	> 80dB
Sampling Rate	48kHz
Bit Rate	24bit
Distortion	≤0.1%
Audio Output Connector	3.5mm headphone jack 3.5mm TRS output
Power Requirements	Built-in lithium-ion battery (450mAh)
Built-in Battery Life	Approx. 6 hours (working with two TXR transmitters)
Antenna	Built-in FPC antenna
Weight	Approx. 35.3 g (1.25 oz)
Dimensions	46×46×16.4 mm



Blink900 B2BOX

Power Requirements	Powered by USB-C port (5V/1.5A)
Battery Capacity	4500mAh
Case's Charging Time	< 4 hours
Weight	Approx. 278 g (9.81 oz)
Dimensions	186×87.2×51 mm

In the Box

- 2× Blink900 TXR Transmitter
- 1× Blink900 RX Receiver
- 1× Blink900 B2BOX Charging Case
- 1× USB-C Cable
- 2× DK3G Lavalier Microphone
- 2× Fur Windshield for Built-in Microphone
- 1× 3.5mm TRS to TRS Output Cable
- 1× 3.5mm TRS to TRRS Output Cable
- 1× 3.5mm TRS to Lightning Output Cable
- 1× 3.5mm TRS to USB-C Output Cable

Other Accessories (sold separately)

Accessory List	Diagram	Presentation
SR-MC8 Saramonic Lanyard		

声明

请在使用前仔细阅读本手册，并严格按照说明进行操作和存储。请妥善保存好说明书以供将来参考。如果用户手册不能帮助您解决某些问题，请向零售商寻求帮助或给我们发送电子邮件：info@saramonic.com

概述

枫笛Blink900 B2R是一款轻巧便携、操作简单的2.4GHz双通道无线麦克风系统，提供高解析度音质，适用于直播、Vlog拍摄，街头采访等场景。

发射器支持板载录音，内置有16GB存储空间，可用作录音笔进行声音备份，解决无线使用时某些原因导致的音频掉帧或其它音频丢失问题。


使用方式多样，除了内置麦克风外，发射器也可搭配3.5mm领夹麦/线性输入设备使用。接收器的3.5mm TRS模拟输出搭配随附的音频线，可适用于相机、录音笔、混音器、智能手机、平板、电脑等。

特点

- 无线传输距离达200米
- 接收器支持接入3.5mm耳机实时监听
- 自由切换单声道/立体声模式
- 高分辨率LCD屏幕，重要信息一目了然
- 配套Blink900 B2BOX充电盒，便于出行携带
- 背夹可搭配挂绳支架（另售），戴在颈脖上使用
- 在48kHz/24bit采样率下，最高支持板载录音时长约为28.5小时。
- 录音满30分钟后将自动分割文件，便于快速查找想要的录音片段。
- 内置SD卡可保存约16GB的音频文件，内存录满后将自动循环覆盖。
- 发射器USB-C接口支持连接电脑/手机等读取录音文件

产品结构

Blink900 TXR发射器

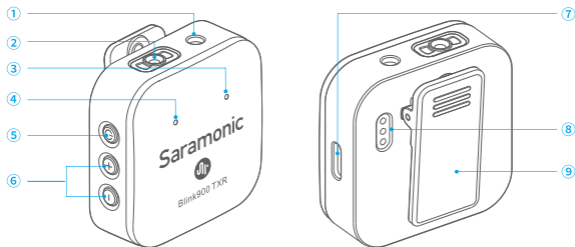

① 3.5mm TRS输入孔

接入随附的3.5mm领夹麦或其他3.5mm麦克风/线性输入设备。

② 内置麦克风

③ 录音指示灯

状态	指示灯
静音模式开启	红灯闪烁
板载录音开启	红灯常亮
板载录音关闭	红灯熄灭

④ 状态指示灯

状态	指示灯
未联机	蓝灯慢闪
对码中	蓝灯快闪
联机成功	蓝灯常亮
最大/最小增益	蓝灯快闪3次
线性输入模式	黄灯常亮
低电量	红灯闪烁
充电中	红灯常亮
充满电	蓝灯常亮

⑤ 电源键

- 长按2秒开/关机;
- 短按开启/关闭静音模式;
- 关机状态下长按5秒进入对码状态。

⑥ +/-键

- 短按“+”/“-”键可在0-6级范围内调节麦克风增益(参数设定在电源关闭后仍保留)。
- 同时长按“+”键和“-”键2秒可切换麦克风输入/线性输入模式(参数设定在电源关闭后恢复为麦克风输入模式)。
- 长按“-”键3秒开启/关闭板载录音功能。


⑦ USB-C数据接口

用于充电,也可用于连接至电脑或手机读取录音文件。

⑧ 充电触点

⑨ 背夹

Blink900 RX接收器

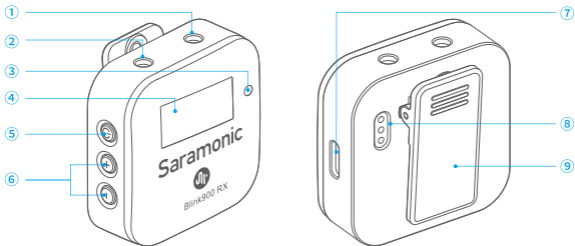

① 3.5mm TRS输出孔

输出模拟音频至相机、录音笔、混音器等设备。

② 3.5mm TRS耳机孔

接入耳机可实时监听音频。

③ 感光元器件

④ LCD显示屏

⑤ 电源键

长按2秒开/关机。

⑥ +/-键


在主界面，短按“+”/“-”键可调节输出音量；复用为设置键，可调整接收器菜单设置（详见“接收器屏幕操作指南”）。

⑦ USB-C充电口（直流电5V）

⑧ 充电触点

⑨ 背夹

Blink900 B2BOX充电盒

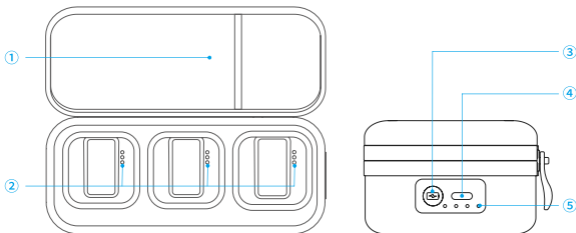

① 配件收纳袋

② 充电触点

③ 电量检测键


按下此键，电量指示灯亮起，显示充电盒当前电量。

④ USB-C充电口（直流电5V）

⑤ 电量指示灯

状态	指示灯
低电量提示	● ○ ○ ○
充电中	● ● ● ●
充满电	● ● ● ●
当前电量75% (仅为示意)	● ● ● ○

接收器屏幕操作指南

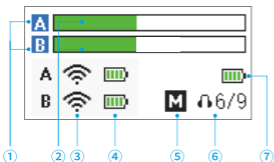

主界面

① 通道开关图示

- A / B** 表示 A/B 通道已连接。
- A / B** 表示 A/B 通道未连接。
- A off / B off** 表示 A/B 通道已关闭。

② 实时输入电平指示

显示实时输入电平大小

③ 射频信号强度指示

用来指示当前信号强度。

- 信号最强 (配对成功)
- 信号最弱 (配对成功)
- 未联机

④ 发射器电量指示

显示发射器当前电量。当图标开始闪烁时, 请及时为发射器充电。

⑤ 接收器输出模式

M: 单声道 **S**: 立体声



⑥ 输出音量

⑦ 接收器电量指示

显示接收器当前电量。当图标开始闪烁时, 请及时为接收器充电。

菜单页


- 在主界面, 长按“+”键进入菜单界面。
- 在菜单页, 长按“+”键进入进入选项—短按“+”/“-”键调整各参数值或功能—再次长按“+”键保存设定—长按“-”键退回到主界面。
- 如果超过20秒不操作, 显示屏将自动跳转回主界面。



通道设置


开启 / 关闭通道 A/B。

默认设置: 通道 A: 开启 通道 B: 关闭

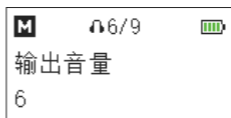


输出音量设置

音量调节范围为 0-9, 默认设置为“6”。(即使在电源关闭后, 该参数设定仍然保留。)

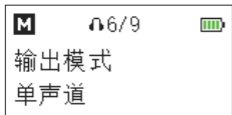


输出模式设置

输出模式可以设置为单声道或立体声。设置为单声道模式时，音频将混合到左右两边。设置为立体声模式时，两个发射器的音频输出将左右分开。默认设置为“单声道”。




背光时间设置

背光灯时间可设置为常亮、10 秒、30 秒、或 60 秒，默认设置为“常亮”。




亮度设置

可将亮度设置为“自动”或在 1-10 范围内手动设置亮度。默认设置为“7”。




语言设置

English/ 简体中文可供选择，默认设“English”。

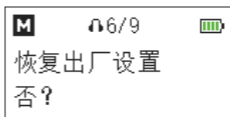

恢复默认设置



对码


选择“是？”将接收器与发射器配对。

如何使用


1. 长按电源键2秒，将发射器、接收器开机。

2. 发射器和接收器出厂前已配对成功。若其断开连接，请进行如下配对操作：

① 长按接收器“+”键进入菜单界面→短按“+”或“-”键找到“对码”页面；



② 长按“+”键进入选项→短按“+”或“-”键选择“是?”；

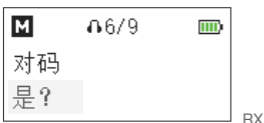

③ 再次长按“+”键确认选项，接收器进入对码状态；

④ 关机状态下，长按发射器电源键5秒，使其进入对码状态，其状态指示灯呈蓝灯快闪；

⑤ 发射器和接收器将在10秒内完成配对。配对成功后，发射器状态指示灯变为蓝灯常亮。

3. 使用适配音频线将相机、手机、或电脑等设备连接至接收器的3.5mm TRS音频输出孔。

4. 根据需求，可将您的耳机连接至接收器的3.5mm耳机孔进行音频监听。

5. 根据需求，可长按发射器的“-”键3秒开启板载录音功能。

6. 录制结束后，可将发射器/接收器放入充电盒中进行充电。

故障排除

在使用本机的过程中出现任何问题，请参照以下内容加以解决。如果此手册仍然无法解决您遇到的问题，请与我们当地的经销商售后服务部联系。

• 产品无法进入对码状态

在确保发射器处于关机状态下，长按电源键直至发射器状态指示灯变为蓝灯快闪时再松开，否则无法进入对码状态。

• 产品无法一拖二对码联机

- ① 对码时需逐一进行，先与第一台发射器对码联机后，再操作第二台发射器进行对码，暂不支持两台发射器同时对码。
- ② 产品在一拖二对码过程中，若出现了一台发射器对码不成功的情况，需要先将已经对码成功的发射器关机后，再重复配对操作，将未对码的发射器与接收器进行对码。

• 发射机无法开启板载录音功能

- ① 发射器需要与接收机联机后才可开启板载录音功能。
- ② 当发射器连接电脑或移动设备，进入U盘模式，此时无法开启板载录音。
- ③ 发射器开机且与接收器联机后，在接收器关机、超距断连、低电报警等状态下，发射器板载录音功能都能正常使用。

• 麦克风无声音

- ① 在联机状态下，检查发射器当前是否处于线性输入模式（发射器左侧指示灯呈黄灯）。可以同时长按“+”“-”键2秒切换为麦克风收音模式（发射器左侧指示灯呈蓝灯）。
- ② 检查发射器是否处于静音模式，短按其电源键即可解除静音。
- ③ 检查增益、音量是否被调至最低，将其调至合适的档位。

• 发射器连接电脑时无法读取板载录音文件

确保板载录音功能已关闭。在板载录音功能关闭后再连接电脑方可读取板载录音文件。

• 产品无法开机

确认是否因太长时间未使用导致电池没电，连接充电线进行电路激活。

• 产品的使用距离受限且出现变音噪音

- ① 一般由环境干扰导致，当前使用环境如果有工作中的大功率无线路由器或无线设备，建议更换使用场景，若无法避免则需要找到合适的距离或角度。
- ② 由于在2.4GHz频谱下，信号很容易受干扰，请尽量避开墙壁和建筑物等障碍物，避免接近2.4GHz频率的设备，如大功率Wi-Fi天线、收音机等。
- ③ 检查产品是否连接正常，线材是否有松动。

• 充电盒无法给产品充电

- ① 首先建议为充电盒充电，排除因充电盒电量过低引起。
- ② 用干净的布擦拭产品和充电盒的触点，避免由灰尘引起的接触不良。
- ③ 若充电盒磁力老化，无法吸附住产品，请联系售后协助处理。

• 找不到刚录制的录音文件

- ① 录音文件以REC001~REC999的顺序命名, 新录制的文件一般为最大数字。
- ② 录制的时间如果超过30分钟, 可以回放上一个录音检查, 录音时每隔30分钟会自动生成新文件进行保存。
- ③ 不建议修改成与系统命名相同的文件名, 易出现命名冲突。

参数

Blink900 TXR

拾音器	内置4mm咪头
极性模式	全向型
传输方式	2.4GHz数字频段
操作距离	最远至200米(无障碍)
频率响应	20Hz-20kHz
最大声压级	100dB SPL (1kHz @ 1m) dBu
信噪比	> 80dB
采样率	48kHz
比特率	24bit
失真	≤ 0.1%
天线	内置FPC天线
音频输入接口	内置麦克风/ 3.5mm TRS输入孔
供电方式	内置锂电池供电(400mAh)
内置电池续航时间	约5.5小时(板载录音功能开启后约4.5小时)
充电时长	约2小时
内存大小	16GB
最高存储录音时长	约28.5小时
录音格式	WAV
重量	约19.5 g
尺寸	36×36×12.5 mm

Blink900 RX

传输方式	2.4GHz数字频段
操作距离	最远至200米(无障碍)
频率响应	20Hz-20kHz
最大声压级	100dB SPL (1kHz @ 1m) dBu
信噪比	> 80dB
采样率	48kHz
比特率	24bit
失真	≤ 0.1%
音频输出接口	3.5mm耳机插孔 3.5mm TRS输出孔
供电方式	内置锂电池供电(450 mAh)
内置电池续航时间	约6小时(连接两个TXR状态下)
天线	内置FPC天线
重量	约35.3 g
尺寸	46×46×16.4 mm

Blink900 B2BOX

供电方式	USB-C接口(5V/1.5A)
充电盒电池容量	4500mAh
充电盒充电时长	< 4小时
重量	约278 g
尺寸	186×87.2×51 mm

包装清单

- 2× Blink900 TXR发射器
- 1× Blink900 RX接收器
- 1× Blink900 B2BOX充电盒
- 1× USB-C数据线
- 2× DK3G领夹麦
- 2× 内置麦克风防风毛套
- 1× 3.5mm TRS转TRS输出线
- 1× 3.5mm TRS转TRRS输出线
- 1× 3.5mm TRS转Lightning输出线
- 1× 3.5mm TRS转USB-C输出线

其它配件(另售)

配件名称	配件图示	组合效果
SR-MC8 枫笛挂绳支架		



For better recording experience, the application Saramonic is recommended.

为获得更好的录制体验, 推荐使用枫笛 Saramonic 自主研发应用软件 Saramonic。



Scan the QR code and follow us!

Shenzhen Jiayz Photo Industrial., Ltd
深圳市长丰影像器材有限公司

A16 Building, Intelligent Terminal Industrial Park of Silicon Valley
Power, Guanlan, Longhua District, Shenzhen, China
深圳市龙华区观澜街道大富工业区硅谷动力智能终端产业园A16栋

☎ 400-613-1096 🌐 www.saramonic.com ✉ info@saramonic.com